

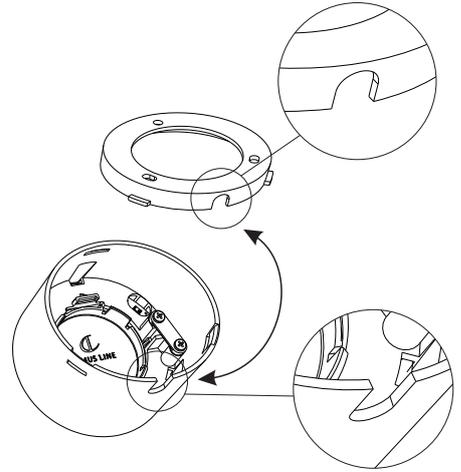



UNIKA (D-M)

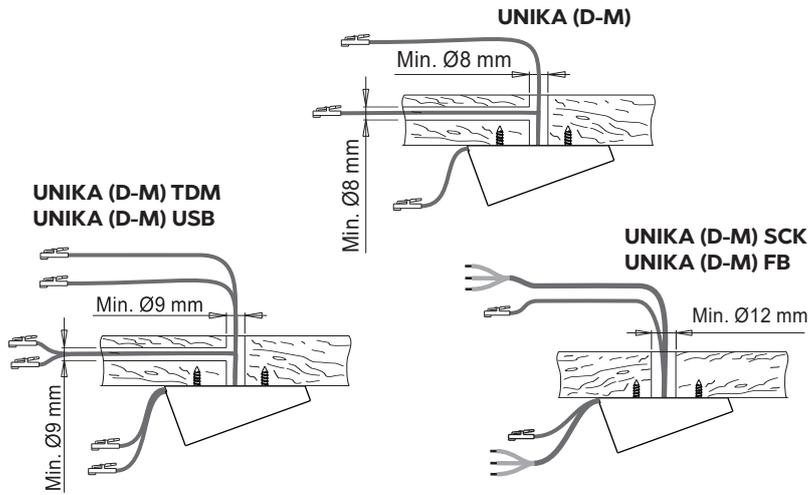


UNIKA (D-M)

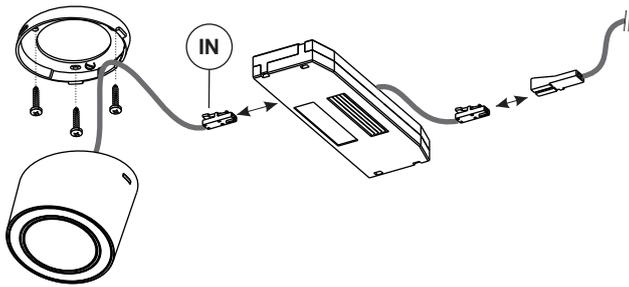






UNIKA (D-M) TDM

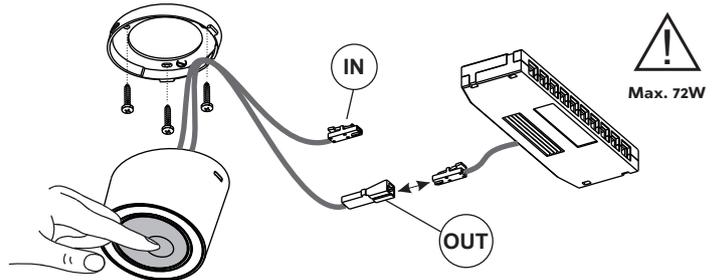

UNIKA (D-M) SCK (FB)

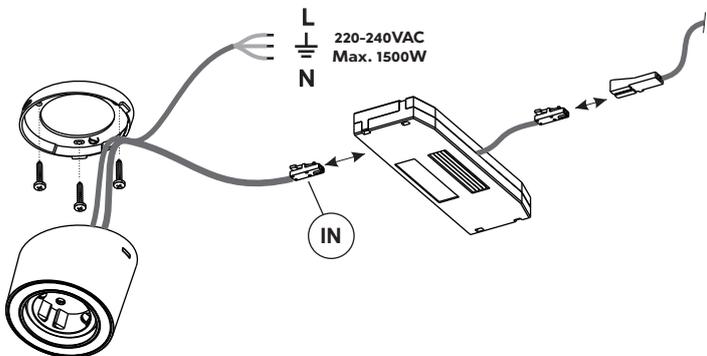


UNIKA (D-M) USB

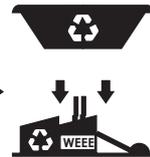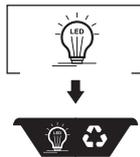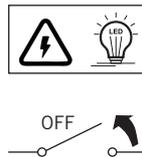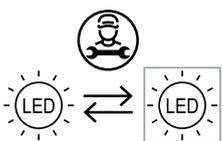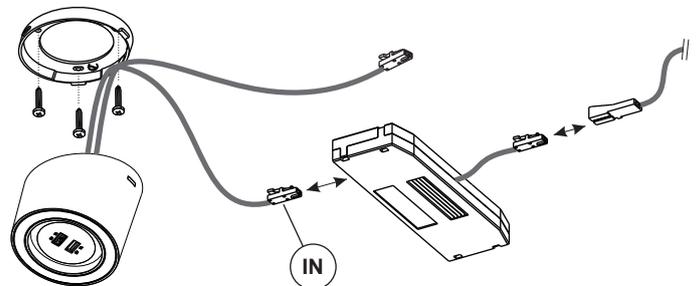


UNIKA




SET UNIKA (D-M)

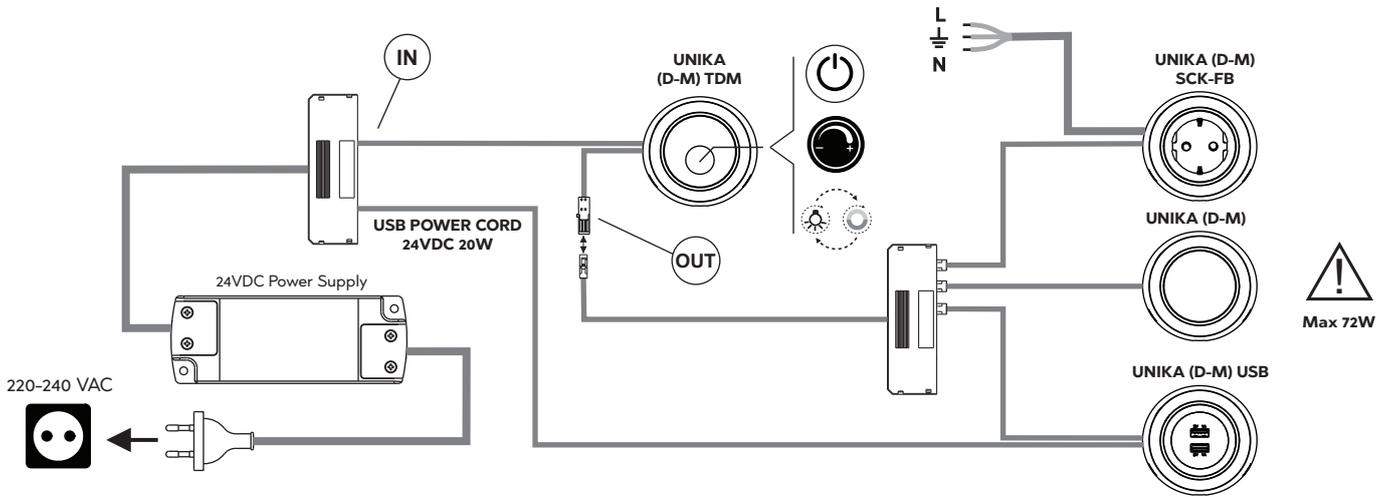




UNIKA TDM

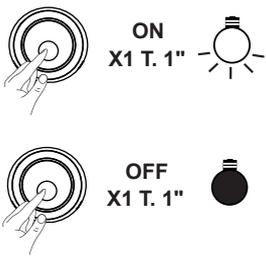

UNIKA D-M TDM

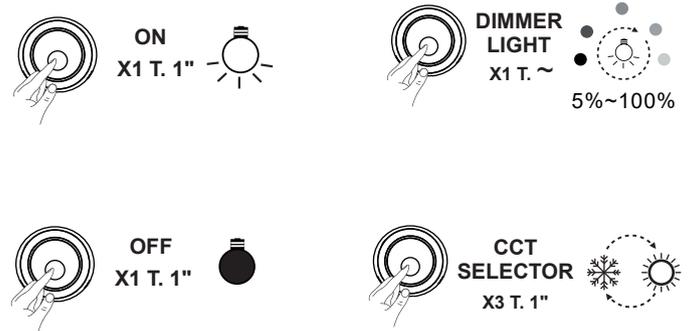


UNIKA (D-M) USB

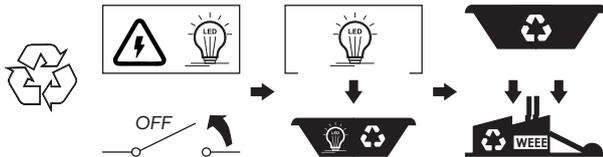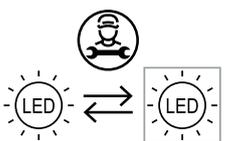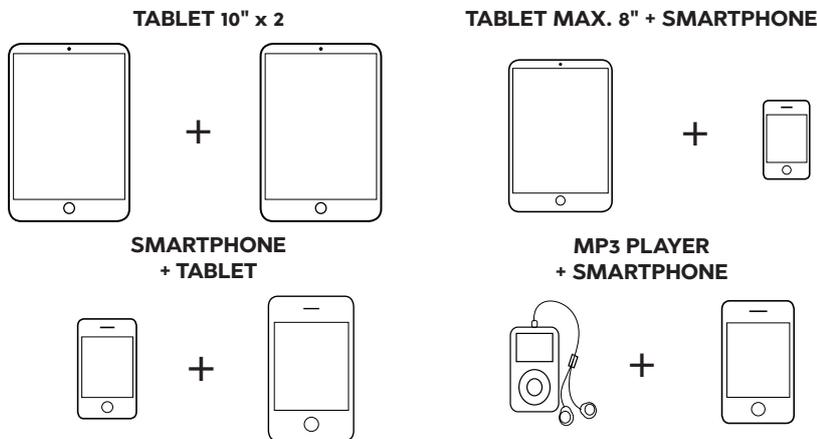


UNIKA




UNIKA (D-MWA)

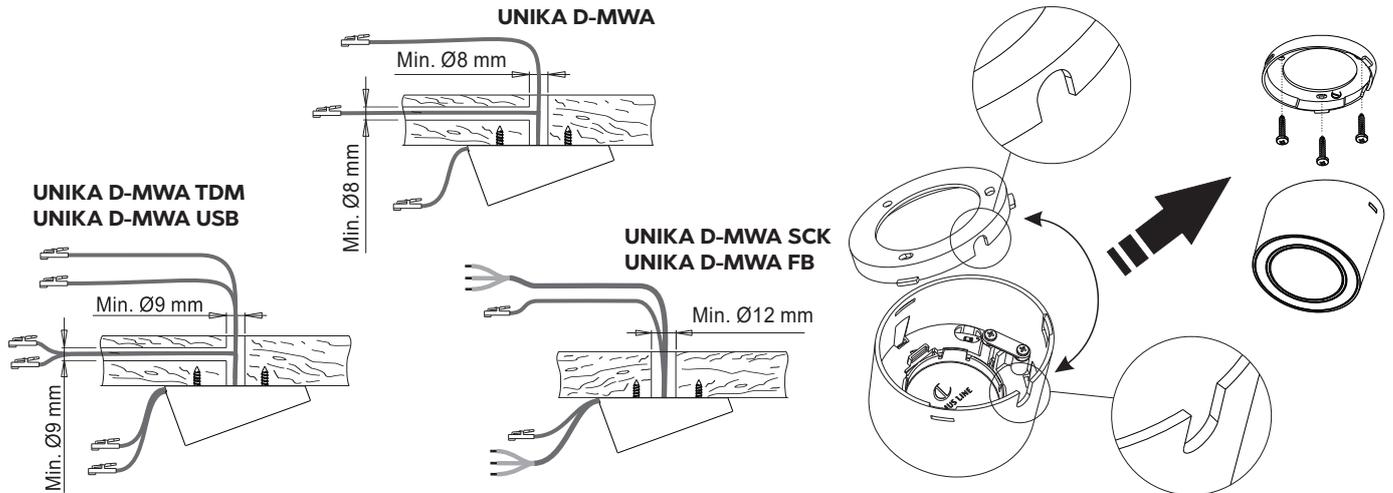


UNIKA D-MWA TDM

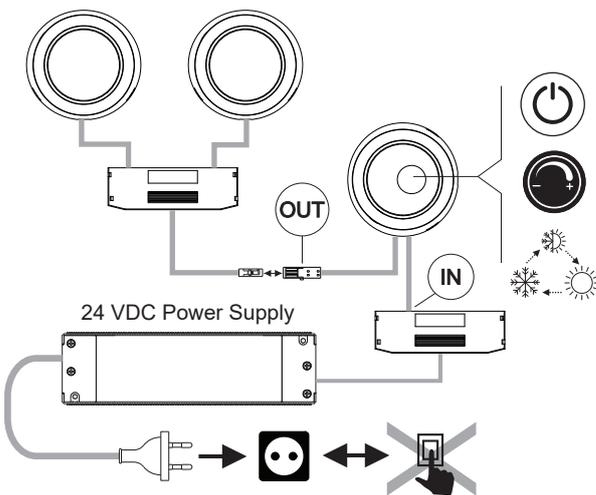







UNIKA D-MWA TDM

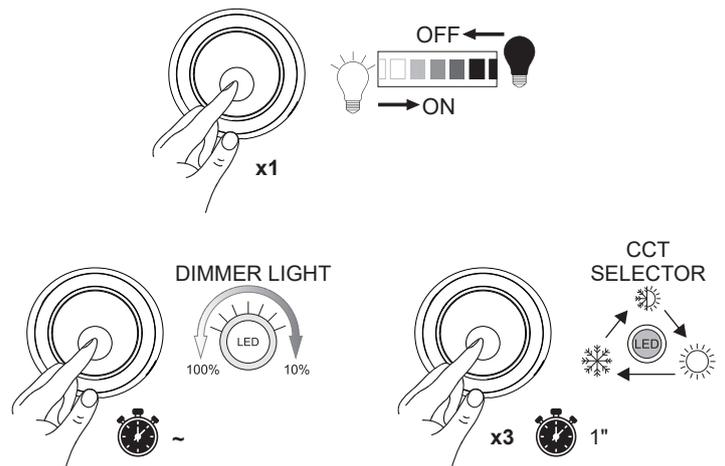

UNIKA D-MWA SCK / FB

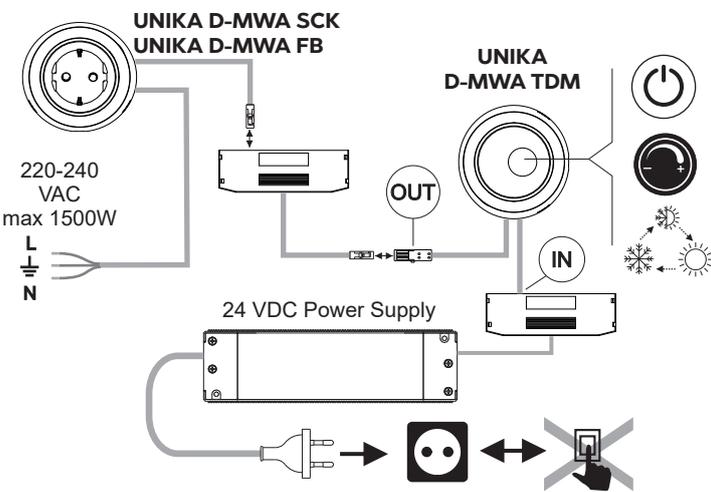


UNIKA D-MWA: wrong connection

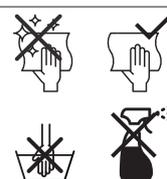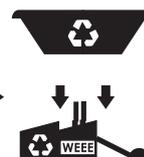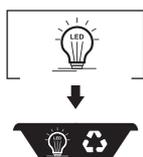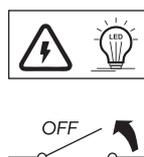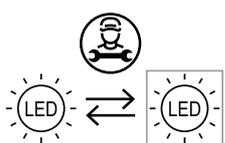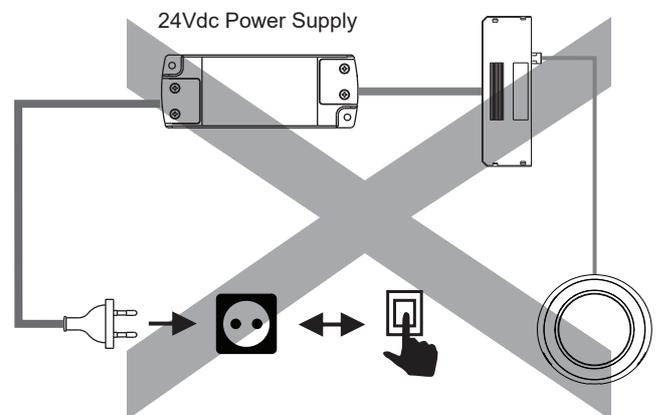



UNIKA D-MWA USB

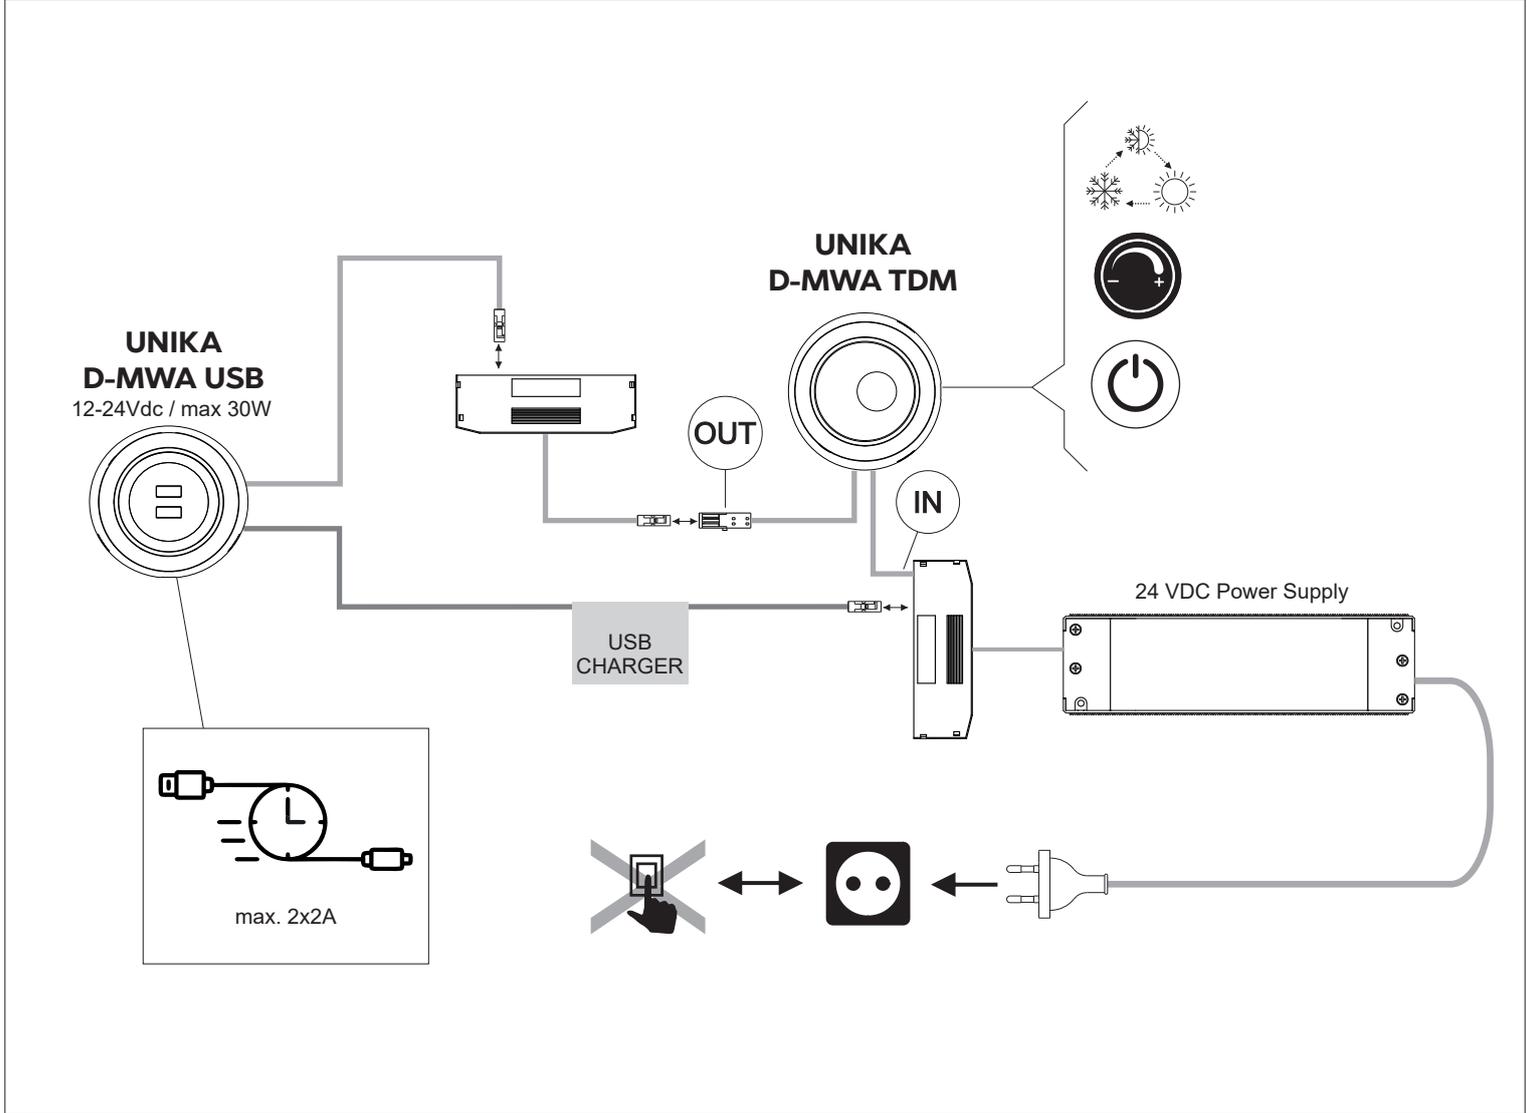

SET UNIKA D-MWA

